

Plasson Inlet Assembly Instruction



1. All parts in Package




2. Tools for assembly: Rubber hammer, Screw driver (Electrical driver would be better), Wrenches



3. Install frame bar 1, 2 and 3 together. Please note that each frame bar is with specified direction.



4. Install and tighten 4 self-drill screws with screw driver to fix frame 1, 2 and 3. Please note that all frame bars should be matched tightly without gap.

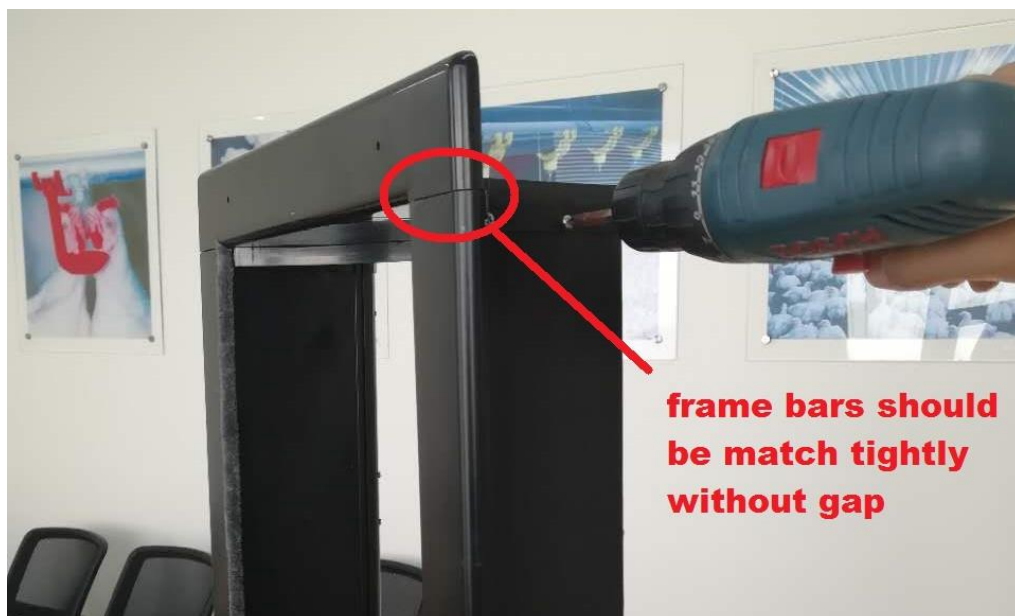

5. Install wind shield to the PE connection bar (at bottom side of frame bar 2). Please note that the PE connection bar should be plugged into the slot of wind shield.



6. Install frame bar 4 to complete the main frame, and install and tighten another 4 self-drill screws as well. Please note that all frame bars should be match tightly without gap.



7. Turn over the inlet and install anti-bird net, fixed with self-drill screws



8. Install 2 sets of meta rings on wind shield. 1 set contains 1 metal ring, 1 plastic base late, 2 M8 screws ,washers and bolts.



9. Complete.



Feeding



Drinking



Climate



Housing

Songshan Rd.West, Liuting Airport Industrial Park,
Qingdao, Shandong, China Tel: +86-532-67762109
Email:info@plasson.cn Web:www.plasson.cn